


# DSR-470 Digital Receiver SELF INSTALLATION INSTRUCTIONS

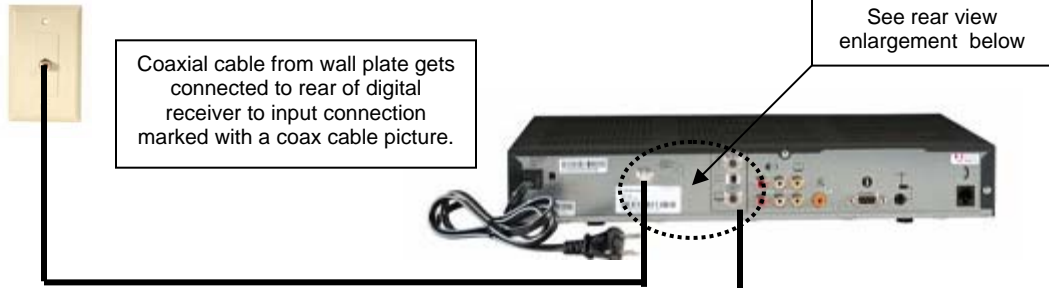

Coaxial cable from wall plate gets connected to rear of digital receiver to input connection marked with a coax cable picture.


See rear view enlargement below

Activation –  
 \* Power on digital receiver  
 \* With remote control tune digital receiver to channel 316 or 315.  
 \* Make sure you have a green light on front of receiver next to the power button.  
 \* Receiver may take up to 30 minutes to download guide and activate.

Coaxial cable from the digital receiver is connected to the RF input of the television set. Tune the television to channel 3.



DSR-470 rear view

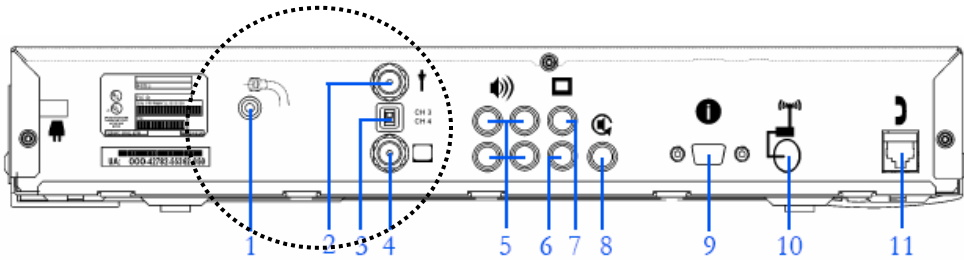

- |                                |                             |
|--------------------------------|-----------------------------|
| 1..... Cable Input             | 7..... TV Output            |
| 2..... Antenna Input           | 8..... Dolby Digital Output |
| 3..... Channel 3/4 Remodulator | 9..... Multimedia Port      |
| 4..... VHF Output              | 10..... UHF Remote Port     |
| 5..... Audio Outputs           | 11..... Phone Jack          |
| 6..... VCR Output              |                             |

